

## PU Injection Foam Resins

# WEBAC® PURstop Accelerator

- ▶ Accelerates the foam formation of **WEBAC® PURstop**

### Range of application

- Accelerates the reaction and increases the expansion of PU injection foam resin **WEBAC® PURstop**

### Application instruction


- Shake well before use
- Add accelerator amount referring to total volume (component A + B)
- Mix into component A immediately before use

WEBAC-Chemie GmbH  
 Fahrenberg 22  
 22885 Barsbüttel  
 Germany  
 Tel. +49 40 67057-0  
 Fax +49 40 6703227  
 info@webac.de  
 www.webac-grouts.com

[www.webac.de](http://www.webac.de)

**Reaction time (with 10% water) of WEBAC® PURstop depending on amount of WEBAC® PURstop Accelerator added at 5 °C/41 °F, 10 °C/50 °F and 23 °C/73 °F**

— Start of reaction  
 — End of Reaction  
 II Fault tolerance

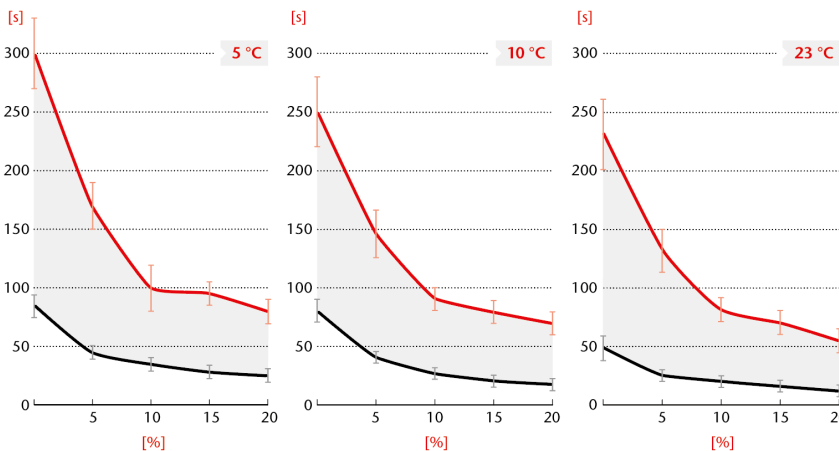

## Technische Information Technical Information